

# E-VLT Setup and Quick Start

**1** Supply the E-VLT with 110V power cord

**2** Press the Play Arrow to run Auto-Test or press Skip

**3** Auto-Test Pass

**4** To access the main menu, press the check mark

**5** Select Leak Test

**6** Select the program

**7** Select Module Pack

**8** Select Housing or Cooling Test

**9** Press the Play arrow to start test

**10** Test in progress

**11** Test Screen-Pass

**12** Test Screen-Fail

## E-VLT Setup and Quickstart

