


1



Windows PC operation system required for Optimus installation.

Note: It is recommended to turn off firewall settings before PC software installation.


2

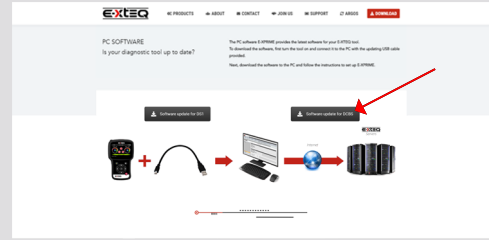

Go to www.e-xteq.com. Click on **DOWNLOAD** and click the button “**Software update for DCBS**”.


Note: If Optimus is already installed on your computer, skip to step 5.

3

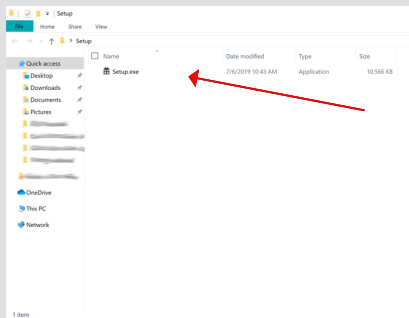


After the Optimus file is finished downloading, locate and open it to run the OptimusSetup.exe file.

4

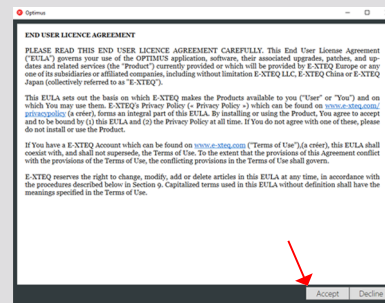


Follow the prompts to continue the installation process.

5

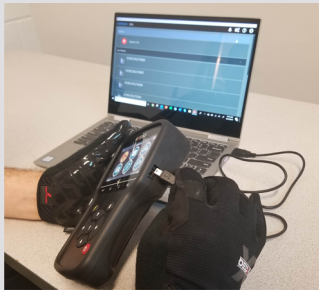


Connect your device to the PC using the USB cable included in the kit. This will allow a two-way connection between your device and PC.

6

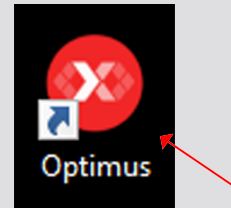


After Optimus has installed, locate and double click the Optimus icon on your desktop.

7

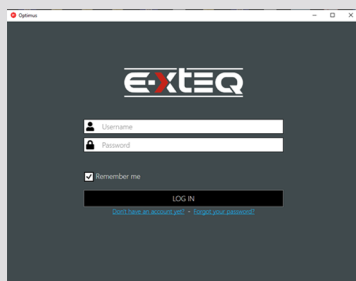

Optimus will ask you to enter your Username and Password. If this is your first time, you will have to register for an account on Optimus.

8

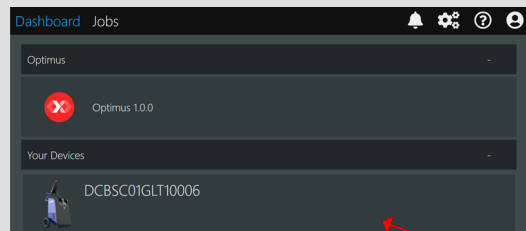

The tool will be recognized by Optimus. Click on your Device for update. Your device will complete the update automatically if any available.

GM DCBS Remote



- 1 IR THERMOMETER
- 2 CONNECTION TO TROLLEY
- 3 BATTERY STATUS
- 4 REMOTE CLAMP CONNECTION PORT
- 5 REMOTE CONNECTION VOLTAGE DISPLAY
- 6 TROLLEY CONNECTION VOLTAGE DISPLAY
- 7 DIAGNOSTIC/CHARGE INDICATOR
- 8 TROLLEY CONNECTION INDICATOR
- 9 ERROR MODE INDICATOR
- 10 LOAD TEST INDICATOR
- 11 START TEST
- 12 CANCEL, PREVIOUS STEP
- 13 OK, NEXT STEP
- 14 ARROWS - UP, DOWN, LEFT, RIGHT
- 15 POWER ON/OFF
- 16 ETHERNET PORT FOR PHYSICAL CONNECTION

CONTACT US

TECH SUPPORT - USA
1-877-453-3265 *English*
support.usa@e-xteq.com

HOURS OF OPERATION (EST)
Monday - Friday: 8 am - 8 pm

Comprehensive support also available
through www.e-xteq.com

Scan QR Code to view
DCBS User Manual.

