

How to Perform a Diagnostic Trolley Procedure by using Database Selection

1 Log In or Skip by pressing on the Anonymous Button



2 Press the Diagnostic Icon to select it




3 Press MMY Selection Icon




4 Select Make, Model, Year



5 Select Main or AUX battery

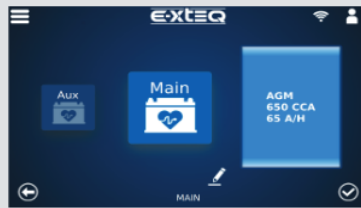

6 Take Battery Temperature

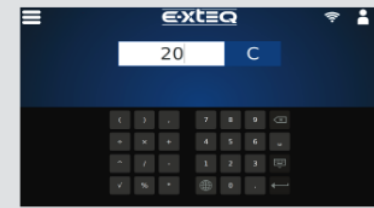

7 Pre-Charge will start if needed




8 IR Measurement in Progress




9 Load Test in Progress



10 Reserve Capacity Test in Progress

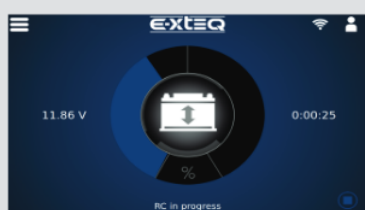

11 Charge Acceptance in Progress

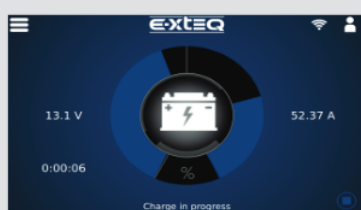

12 End Result



Comprehensive support also available through www.e-xteq.com

How to Perform a Diagnostic Trolley Procedure by using Manual Battery Selection

1 Press the Diagnostic Icon to select it



2 Press Manual Battery Selection Icon



3 Select Battery Chemistry




4 Select Battery CCA Standard




5 Enter Battery CCA



6 Take Battery Temperature

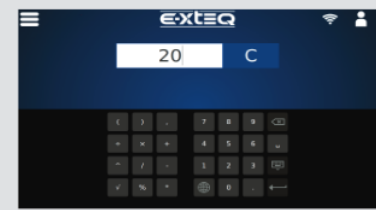

7 Pre-Charge will start if needed

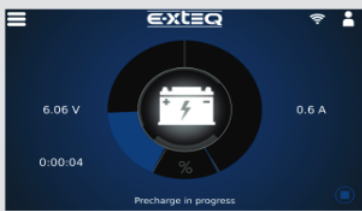


8 IR Measurement in Progress



9 Load Test in Progress



10 Reserve Capacity Test in Progress

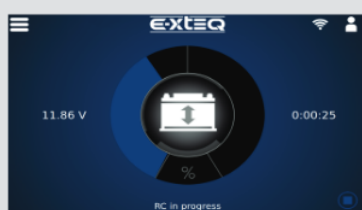

11 Charge Acceptance in Progress



12 End Result



Comprehensive support also available through www.e-xteq.com